


CAN OPENER WALL GUIDE

Maintain the great performance of your Bonzer® Can Opener




Bonzer® Can Openers are lovingly made in the UK at Mitchell & Cooper's factory in East Sussex. Built to last, the Bonzer® Can Openers have been manufactured since 1930s.


OPERATING

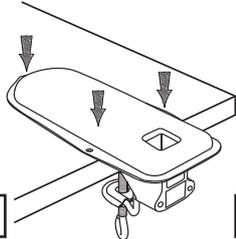


1 Firmly affix the can opener base to a flat surface with screws and (or) clamp provided.

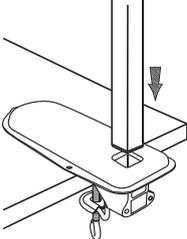


2 Push can opener shaft down into the base hole.

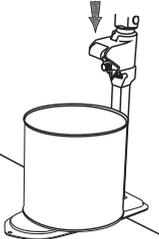

3 Use palm of hand to push the can opener down firmly, ensure the blade has pierced the can.

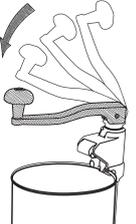

4 Push the handle down to start operating.

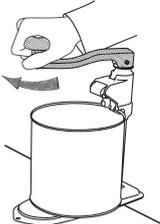


5 Turn handle clockwise until can is fully open.


CLEANING




1 Pull handle back to release.

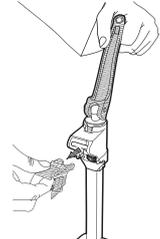

2 Remove the trigger while pulling back handle.

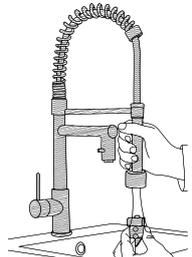


3 Wash trigger thoroughly between usage.

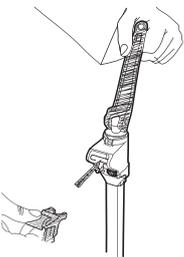


4 Replace the trigger while pulling back handle.


WHEEL FITTING

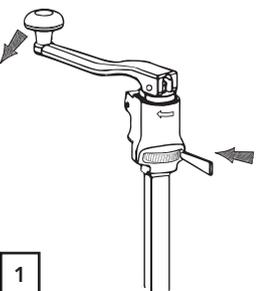


1 Engage the handle into operational mode (down position). Place the metal rod (provided with new wheel) in the back right hand side of the wheel and wind the handle anticlockwise until loose.

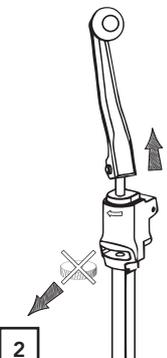

2 Lift the handle out and wipe shaft clean. Remove the wheel from the chamber.

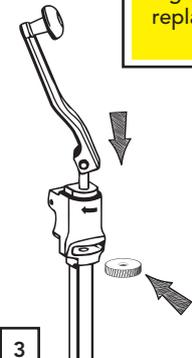


3 Replace with a new wheel ensuring the Bonzer® text side is facing downward (label on wheel must face upwards)

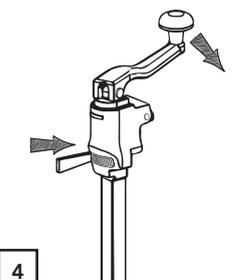

4 Insert handle and push down firmly to reconnect. Place metal rod in the back left hand side and wind the handle clockwise until you feel it lock but don't over tighten.

WARNING
Blade and wheel must be regularly maintained and replaced to avoid risk of metal shavings.

BLADE FITTING

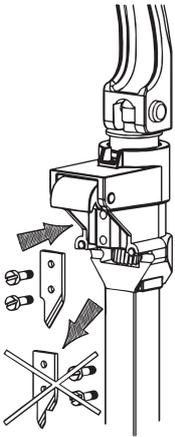

Loosen screws to free blade. Replace the blade and ensure stamped side faces trigger mechanism. Replace screws and tighten.

TIPS & TROUBLESHOOTING

- ✓ Open the tops of cans not the bottoms, store cans such as beans upside down.
- ✓ Open dented cans from just to the left of the dent.
- ✓ Turn the handle clockwise - anticlockwise rotation could loosen the mechanism.
- ✓ Never turn the handle continually without a can in place.
- ✓ When replacing the can opener - change the base as well.
- ✓ Never sharpen the blade - sharp blades cause sharp edges.
- ✓ Replace chipped blades and wheel.

RESOURCES



Spares Shop & Maintenance
[www.mitchellcooper.co.uk/
spare-parts/can-opener-spares/](http://www.mitchellcooper.co.uk/spare-parts/can-opener-spares/)



Extended Warranty
[www.mitchellcooper.co.uk/
Can-Opener-Registration](http://www.mitchellcooper.co.uk/Can-Opener-Registration)